Analog Travel Alarm Clock

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Analog Travel Alarm Clock fits easily into a purse or briefcase and is perfect for the business person who is always on the road. You can insert a picture into the picture frame to make a special keepsake

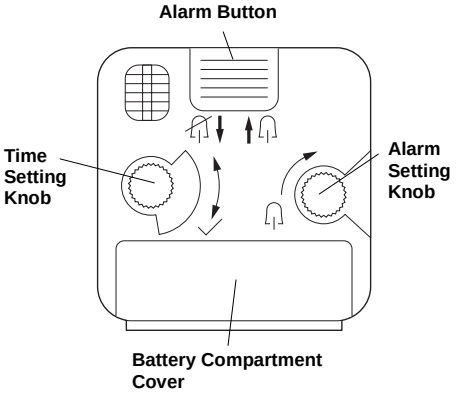

INSTALLING A BATTERY

Your clock uses one AA battery (not supplied) for power. For the longest life, we recommend a RadioShack alkaline battery.

Caution: Use only a fresh battery of the required size and recommended type.

1. Place your thumb on the dent on the battery compartment cover to lift and remove it.

2. Insert the battery as indicated by the polarity symbols (+ and –) shown inside the compartment.

3. Replace the cover.

When the clock stops operating properly, replace the battery.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the clock for a month or more, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

SETTING THE CLOCK

To set the clock to the current time, rotate the time setting knob counterclockwise to move the hour and minute hands forward, or clockwise to move them backward.

To set the clock's alarm time, rotate the alarm setting knob clockwise. The alarm hand moves backward.

Caution: Do not rotate the alarm setting knob counterclockwise or you could damage the clock.

LIGHTING THE CLOCK

Hold down **LIGHT/SNOOZE** on the front of the clock to view the time in the dark.

USING THE ALARM

1. Slide the alarm button up to turn on the alarm. At the set time, the alarm sounds for about 30 minutes or until turned off. The alarm gradually shifts to a higher tone and the volume increases the longer it sounds.

2. You can temporarily silence the alarm by pressing **LIGHT/SNOOZE**. After about 4 minutes, the alarm sounds again. You can repeat this for up to 30 minutes after

RadioShack®
www.radioshack.com℠

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

the set alarm time. The alarm automatically turns off after 30 minutes.

3. Slide the alarm button down to turn off the alarm.

Note: To reduce battery drain, leave the alarm turned off when you are not using it.

FRAMING A PICTURE

1. Select a picture or photograph to frame.
2. Insert a small flat-bladed screwdriver or straightened paper clip into the recess on the cover and pry out the plastic cover.
3. If necessary, trim the picture to fit the frame, using the plastic cover as a template.
4. Place the picture in the frame and replace the plastic cover by inserting its edge to the four latches on the cover.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

63-990
06A01
Printed in Thailand